



How to use:



1 Place the food in colander.

2 Press the button to stop.



3 Add the water if the salad needs washing, then place the cover.



4 Pour out the excess water.



5 Hold the top and pull to spin.



6 Unscrew the knob to clean the cover.

⚠ CAUTION

- Use, wash and store with care. Keep out of reach of children!
- Do not overfill.
- Container is not recommended for food storage.
- Avoid staining. Wash and dry immediately after use.
- Do not use corrosive cleaning products. Do not use too much detergent.
- Dishwasher and dish sterilizer safe (except suction base), keep temperature below 65°C / 150°F
- Keep away from high heat. Do not put this product in oven or microwave oven.



Our products are patent registered. We will and have taken legal action against any infringement or unauthorized reproduction, or any portion of it.
Copyright © Müller. All rights reserved.